PT9232 Heavy Industrial • RS232 Communication

Linear Position/Velocity to 550 inches (1400 cm) Aluminum or Stainless Steel Enclosure Options VLS Option To Prevent Free-Release Damage IP68 • NEMA 6 Protection • Hazardous Area Certification

GENERAL

Full Stroke Ranges		0-75 to 0-550 inches
Electrical Interface		RS232
Format		HEX
Accuracy		± 0.10% full stroke
Repeatability		± 0.02% full stroke
Resolution		± 0.003% full stroke
Measuring Cable	stai	nless steel or thermoplastic
Enclosure Material	powder-painted alur	minum or 303 stainless steel
Sensor	plastic-hyb	rid precision potentiometer
Potentiometer Cycle Li	fe	≥ 250,000 cycles
Maximum Retraction Acceleration		see ordering information
Maximum Velocity		see ordering information
Weight, Aluminum (Stainless Steel) Enclosure		8 lbs. (16 lbs.), max.

ELECTRICAL

Input Voltage	922 VDC
Input Current	40 mA
Baud Rate	9600 (selectable to 38.4K)
Update Rate	32 msec

ENVIRONMENTAL

Enclosure	NEMA 4/4X/6, IP 67/68
Operating Temperature	-40° to 200°F (-40° to 90°C)
Vibration	up to 10 g to 2000 Hz maximum





The PT9232 delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT9232 sends a raw 16-bit count from 0000H to FFFFH. Additionally this device can be set to continuously send data or send data only when polled.

As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

Output Signal:



20630 Plummer Street
 Chatsworth, CA 91311
tel: 800.423.5483
 +1.818.701.2750
 fax: +1.818.701.2799

measurement

celesco.com • info@celesco.com

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.cop_{T9232 | 1}

I/O Format



Important! All communications to/from the transducer are in HEX!

User Commands:

	User Command			Sensor Response				
Description	<cmd></cmd>	<b<sub>0></b<sub>	< B ₁ >	<b2></b2>	<cmd></cmd>	<b0></b0>	<b1></b1>	< ⁸ 2>
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version ⁽⁴⁾	date ⁽⁵⁾	date ⁽⁵⁾
Get Serial Number	0x15	0x00	0x00	0x00	0x15	se	erial number ⁽	3)
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	$CMC^{(1)}$	$CMC^{(1)}$	status ⁽²⁾

⁽¹⁾CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes (B_0 and B_1) of the data field. B_0 is the MSB (most significant byte) and B_1 is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

(2)Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows:

0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

⁽³⁾Serial Number

Each sensor has it's own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

(4) Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

(5) Date

This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 - 12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

Example: 08054 = August 5, 2004

Baud Rate

The baud rate can be set using switches **7** & **8** on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.

DIP-7 DIP-8 baud rate



▲ = "0"	
♥ = "1"	

RS232 Controller Board and DIP Switch Location



<u>celesco</u>

celesco.com • info@celesco.com

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799



7.87 [199,9] max.

tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

Fig. 1 – Outline Drawing (18 oz. cable tension only)



DIMENSION (INCHES)

	MEASURING CABLE				
RANGE	Ø .031 in.	Ø .034 in.	Ø .047 in.	Ø .062 in.	
75	n/a	0.22	0.29	0.37	
100	n/a	0.29	0.39	0.49	
150	n/a	0.44	0.59	0.73	
200	n/a	0.58	0.79	0.98	
250	n/a	0.73	0.98	1.22	
300	n/a	0.88	1.18	1.47	
350	n/a	1.02	1.38	1.71	
400	n/a	1.17	1.57	1.96	
450	n/a	1.31	1.77	n/a	
500	n/a	1.46	1.97	n/a	
550	1.61	1.61	n/a	n/a	





Sample Model Number: Model Number: PT9232 - 200 - AL - N34 - 26 - FR - M6 R range: 200 inches a enclosure P19232 aluminum .034 nylon-coated stainless measuring cable: B Ø ៣ **(**) measuring cable tension: 18 oz. **D** cable exit: front (horizontal) Ø electrical connection: 6-pin plastic connector **Full Stroke Range:** 100 150 200 250 300 350 400 450* 500* 550* 75 Order code: full stroke range, min: 75 in. 100 in. 150 in. 200 in. 250 in. 300 in. 350 in. 400 in. 450 in. 500 in. 550 in.

* – 36 oz. cable tension strongly recommended

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

DIMENSIONS ARE IN INCHES [MM]

Ordering Information:

now part of Measurement Specialties, Inc.

celesco celesco.com • info@celesco.com

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.cop_{T9232} | 3

Ordering Information (cont.):

Enclosure Material:







celesco

4

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

now part of Measurement Specialties, Inc.

celesco.com • info@celesco.com

PT923&UNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com

Fig. 2 – Outline Drawing (36 oz. cable tension only)



DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.



DIMENSION (INCHES)

	MEASURING CABLE				
RANGE	Ø .031 in.	Ø .034 in.	Ø.047 in.	Ø .062 in.	
75	n/a	0.22	0.29	0.37	
100	n/a	0.29	0.39	0.49	
150	n/a	0.44	0.59	0.73	
200	n/a	0.58	0.79	0.98	
250	n/a	0.73	0.98	1.22	
300	n/a	0.88	1.18	1.47	
350	n/a	1.02	1.38	1.71	
400	n/a	1.17	1.57	1.96	
450	n/a	1.31	1.77	n/a	
500	n/a	1.46	1.97	n/a	
550	1.61	1.61	n/a	n/a	





VLS Option - Free Release Protection

The patented Celesco Velocity Limiting System (VLS) is an option for PT9000 Series cable extension transducers that limits cable retraction to a safe 40 to 55 inches per second for the single spring option and 40 to 80 inches per second for the higher tension dual spring option.

The VLS option prevents the measuring cable from ever reaching a damaging velocity during an accidental free release. This option is ideal for mobile applications that require frequent cable disconnection and reconnection. It prevents expensive unscheduled downtime due to accidental cable mishandling or attachment failure. How To Configure Model Number for VLS Option:



version: 9.0 last updated: August 15, 2013

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799 now part of Measurement Specialties, Inc.

celesco.com • info@celesco.com

celesco

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.copT9232 | 5