SR1A Industrial • Voltage Divider Output

Precision Potentiometric (Voltage Divider) Output 0-62, 0-125 and 0-175 inch Range Options **Designed for Outdoor & IP67 environments** In Stock for Quick Delivery!



6" [152 mm]

⊢ 4″ [100 mm] -

SPECIFICATIONS

Measurement Range, SR1A-62	0–62 in. (0–1575 mm)
Measurement Range, SR1A-125	0–125 in. (0–3175 mm)
Measurement Range, SR1A-175	0–175 in. (0–4445 mm)
Accuracy	± 0.5% FS.
Sensor	plastic-hybrid precision potentiometer
Input Resistance	10K ohms
Maximum Input Voltage	30 volts AC/DC
Resolution	essentially infinite
Repeatability	± 0.1% FS.
Measuring Cable	.034-inch dia. nylon-coated stainless
Maximum Velocity	80 inches (2 meters) per second
Maximum Acceleration	10 g (retraction)
Measuring Cable Tension	23 oz. (6,4 N) ±30%
Cycle Life	250,000 (potentiometer)
Enclosure	polycarbonate
Electrical Connection	M12 Connector (mating plug included)
Environmental Suitability	NEMA 6, IP67
Operating Temperature	-40° to 185° F (-40° to 85° C)
Weight	2.5 lbs. (1.3 Kg)



175-inch model shown

SR1A is a rugged, low-cost, high performance string pot built for wet environments and outdoor applications. Originally designed for off-road construction equipment, the SR1A is the perfect low-cost solution for OEM and stocking distributors.

Available in 62-inch, 125-inch and 175-inch stroke ranges, the SR1A is constructed of a rugged polycarbonate enclosure designed to withstand impact from harsh environments and rugged conditions. Each sensor ships with a handy mounting bracket to make just about any installation very simple. Every SR1A ships with a field installable mating connector and optional cordsets are available.

ORDERING INFORMATION



V_(+out)

(100% fs.)

0



20630 Plummer Street

Chatsworth, CA 91311 tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

celesco celesco.com • info@celesco.com

+out

(pin 2) (pin 3)

common

measurement

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com SR1A | 1

Electrical Connection



Cable Exit Direction Options



Changing the Cable Exit

Changing Measuring Cable Exit

To change the direction of the measuring cable, remove the 4 mounting bracket screws and rotate bracket to one of four available positions. See figures 1 - 4 on the following pages for mounting dimensions.

Changing Electrical Connector Direction

To change the position of the electrical connector, remove the 4 rear cover screws and carefully separate rear cover from the sensor body.

Rotate the rear cover to desired position being careful to not tangle the wiring harness that runs to the connector.



celesco.com • info@celesco.com

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

now part of Measurement Specialties, Inc.





Fig. 2 - "Up" Cable Exit Direction



tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799 now part of Measurement Specialties, Inc.

celesco celesco.com • info@celesco.com

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com SR1A | 3



celesco.com • info@celesco.com

units are in inches [mm] tolerances are ± .04 [1,0] unless otherwise noted tel: 800.423.5483 ° +1.818.701.2750 ° fax: +1.818.701.2799 now part of Measurement Specialties, Inc.