# SR1E

### Industrial • Incremental Encoder Output

Linear Position up to 175 inches (3 meters) 0-125, 0-175 inch Full Stroke Range Options Designed for Outdoor & IP67 environments In Stock for Quick Delivery!



├─ 6" [152 mm] -



4.75" [120 mm]

#### SPECIFICATIONS

Full Stroke Range, SR1E-125	125 inches (3175 mm)
Full Stroke Range, SR1E-175	175 inches (4445 mm)
Output Signal	incremental encoder
Resolution	101 ±2 pulses per inch
Accuracy	± .1% FS
Repeatability	± .05% FS.
Input Voltage	5-30 VDC
Input Current	100 mA max., no load
Sensor	incremental encoder
Output Driver Type	push-pull (note: Vin = Vout)
Output Driver Current	20 mA max., source/sink
Maximum Velocity	80 inches (2 meters) per second
Maximum Acceleration	10 g (retraction)
Measuring Cable Tension	23 oz. (6,4 N) ±30%
Enclosure	polycarbonate
Measuring Cable	.034-inch dia. nylon-coated stainless
Electrical Connection	M12 Connector (mating plug included)
Environmental Suitability	NEMA 6, IP67
Operating Temperature	-4° to 185° F (-20° to 85° C)
Weight	2.5 lbs. (1.3 Kg)



175-inch model shown

The SR1E is rugged, low-cost, high performance string pot built to withstand wet environments and outdoor applications. Designed for construction equipment and factory use, the SR1E is the perfect low-cost solution for OEM and stocking distributors.

At the heart of this sensor is a robust incremental encoder that delivers a linear resolution of 101 pulses per inch. The SR1E ships with an industry standard push-pull encoder driver that can be powered by 5-30 VDC. (Other resolutions and complimentary channels are available, please consult factory). Each sensor ships with a 4-pin, field installable, M12 connector and an additional 13 ft. (4 m) cordset is also available. Just like the rest of our SR1 series, the SR1E is in stock for quick delivery.

#### **ORDERING INFORMATION**





Consult factory for alternate resolution and differential output signals.

20630 Plummer Street • Chatsworth, CA 91311 tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

measurement

celesco.com • info@celesco.com

。 SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com SR1E | 1 Electrical Connection



Changing the Cable Exit

#### **Changing Measuring Cable Exit**

To change the direction of the measuring cable, remove the 4 mounting bracket screws and rotate bracket to one of four available positions. See figures 1 - 4 on the following pages for mounting dimensions.

#### **Changing Electrical Connector Direction**

To change the position of the electrical connector, remove the 4 rear cover screws and carefully separate rear cover from the sensor body.

Rotate the rear cover to desired position being careful to not tangle the wiring harness that runs to the connector.



Cable Exit Direction Options



#### celesco

celesco.com • info@celesco.com

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799

now part of Measurement Specialties, Inc.

2 | SR1E SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com





Fig. 2 - "Up" Cable Exit Direction



## celesco.com • info@celesco.com

now part of Measurement Specialties, Inc.

SUNSTAR传感与控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com SR1E | 3



units are in inches [mm] tolerances are ± .04 [1,0] unless otherwise noted

tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799 now part of Measurement Specialties, Inc.